



Garmin Dezl 770LMT Screen Replacement

This guide will help in the disassembly of the screen for the Garmin Dezl 770LMT.

Written By: Aleem Waris





TOOLS:

- [Spudger](#) (1)
 - [T6 Torx Screwdriver.](#) (1)
 - [T5 Torx Screwdriver](#) (1)
-

Step 1 — Back Panel Removal



- Turn the device screen down and using the screwdriver remove all eight screws from the back plate.

Step 2



- Place a nylon spudger in the seam between the front and back panel and carefully lift around the edge of the device.

Step 3



- Use the spudger to pry apart the screen from all around the device.

⚠ Gently lift the screen so not to disconnect the ribbon attaching the screen to the motherboard.

Step 4 — Screen




- After you've removed the back cover, you will see a copper colored ribbon connected to a grey hinge.
 - Carefully remove the hinge from the cord using a spudger and the ribbon will come out.
- ⚠ The regular black nylon spudger should be used whenever possible, especially around sensitive internal components.
- ⚠ Make sure to wear an anti-static wrist strap when handling the motherboard.

Step 5



- Now you have the screen, which is enclosed by another cover. Remove the eight screws that hold it in place.

Step 6

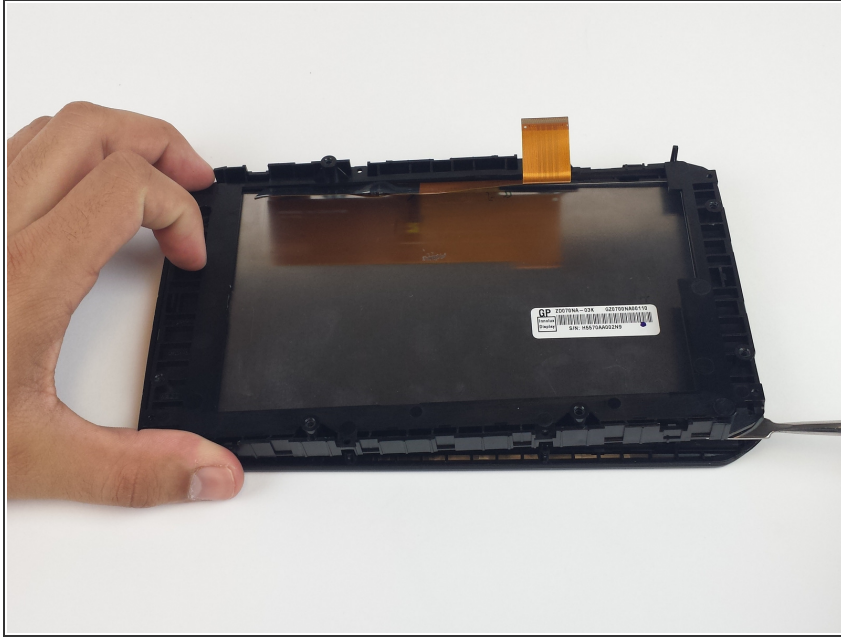

- Once the screws have been taken out, use a spudger to carefully remove the cover. With this cover removed, the screen is now completely exposed.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-16 05:35:03 PM.